INSTALLATION INSTRUCTIONS

UNDERWATER LUMINAIRE SURFACE MOUNT





LS5070 Fountain Light

READ ALL SAFETY INSTRUCTIONS FIRST

- > Follow instructions carefully, failure to do so will void warranty.
- > Ensure installation complies with local law and applicable standards.
- > Input voltage is 30 V DC
- > Only use Lumascape power supply, control equipment and accessories.
- > Ensure mains input power is surge protected.
- > Never make connections whilst the power is connected.
- > Do not make modifications or alter the product.
- > Luminaire must be submerged while in operation.
- > Luminaire is factory sealed; opening will void warranty.


LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

INSTALLATION INSTRUCTIONS


UNDERWATER LUMINAIRE SURFACE MOUNT



Overview

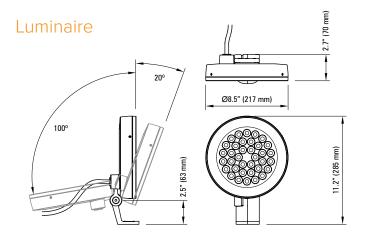

Mounting Foot

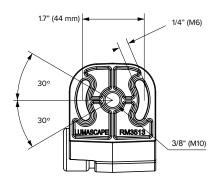

Luminaire Assembly

Step 1 Screw the mounting foot to the luminaire body, Please note that the mounting foot can be reversed if required.



LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

INSTALLATION INSTRUCTIONS

UNDERWATER LUMINAIRE SURFACE MOUNT



Mount Luminaire

Step 2 Place the luminaire in the mounting position and mark the anchor points you wish to use.



Step 3 Drill holes for mounting bracket as marked.



Step 4 Adjust luminaire rotation and secure luminaire to mounting surface.



LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

INSTALLATION INSTRUCTIONS


UNDERWATER LUMINAIRE SURFACE MOUNT



Step 5 Adjust luminaire tilt and tighten screw to lock in tilt.

Connect Luminaire to suitable 30 V DC power supply or low voltage PowerSync™ master.

Ensure electrical connection is in accordance with local electrical code.

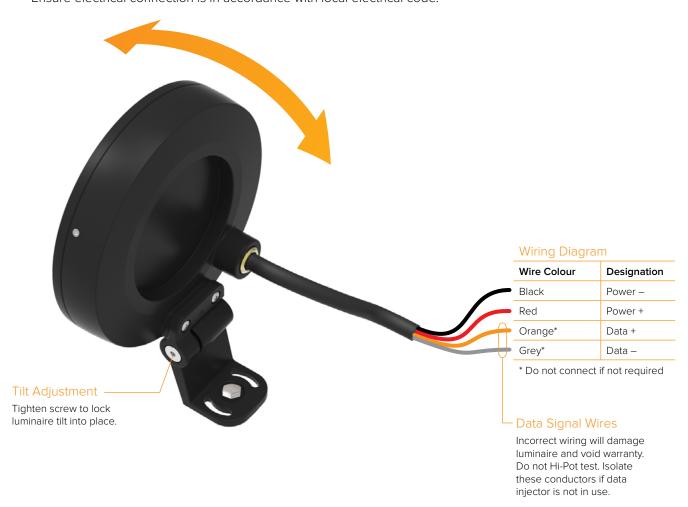

Step 6 Power up the circuit to test the installation.



QUESTIONS Contact us at details below.

LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

4/4