

Lumascape Lighting Industries Pty Ltd 38-44 Enterprise Street, Cleveland, QLD 4163, Australia PO Box 1875, Cleveland D.C., QLD 4163, Australia

07 3286 2299

07 3286 6599

sales@lumascape.com.au

INSTALLATION INSTRUCTIONS

SPOTLIGHT & FLOODLIGHT

MODEL: LS431

IP66 / IP67

INSTRUCTIONS COVER: Remote Control Gear

A.C.N. 0105 72 773

LS431: Centria Surface Mount Remote Gear

Warranty void if not installed as per installation instructions



ISOLATE LUMINAIRE FROM POWER

Failure to isolate power supply before installation or maintenance may result in fire, serious injury, electric shock, death and may damage the luminaire.



WARNING

All connections must be kept dry; failure to do so may result in product reliability issues

CAUTION: fixtures can become very hot. Use discretion in placement









KEEP ELECTRONICS FREE FROM DIRT AND MOISTURE








DO NOT USE SILICONE

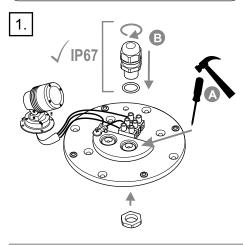


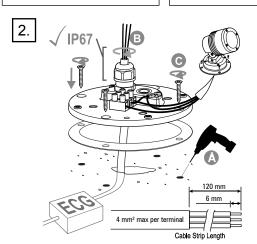


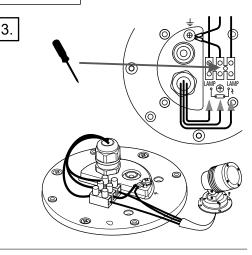


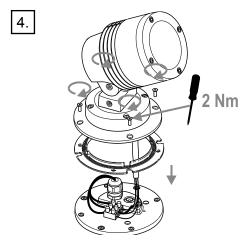


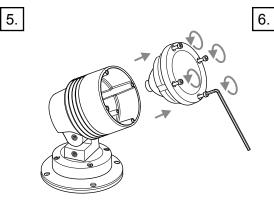

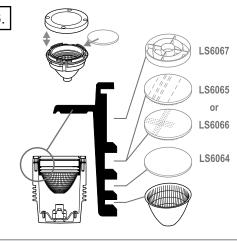


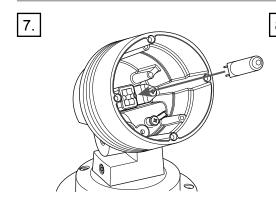


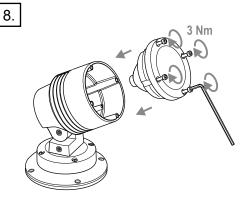

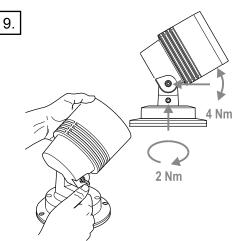

WIRING DIAGRAM

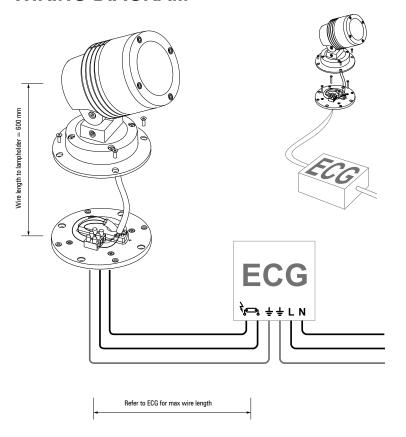


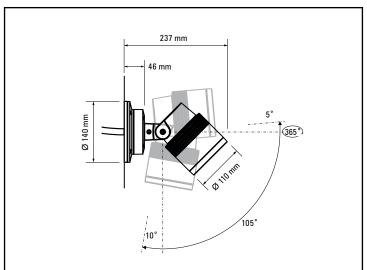


Questions?
Call +61 7 3286 2299
Email sales@lumascape.com.au
www.lumascape.com.au

Do not allow soil, fill or any material to build up around the luminaire. Warranty will be void.

Correct installation

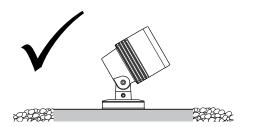

Incorrect installation. Void warranty

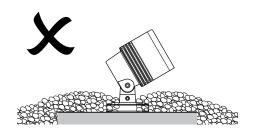

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of FIRE or INJURY:

- 1. Luminaires and transformers to be installed by licensed electrical contractors.
- 2. Luminaires to be used for intended purpose only.
- 3. Do not operate the luminaires with a missing or damaged parts.
- 4. Use only genuine Lumascape parts to replace damaged or missing components.
- 5. Refer to instructions for installation and operating requirements.
- 6. Ensure installation complies with local regulations

Voltage insulation test (megger) will permanently damage product and will void warranty.

SAVE THESE INSTRUCTIONS.