

LS421: Centria Surface Mount

IP66 / IP67

Warranty voided if not installed as per installation instructions

DANGER

ISOLATE LUMINAIRE FROM POWER

Failure to isolate power supply before installation or maintenance may result in fire, serious injury, electric shock, death and may damage the luminaire.



WARNING

All connections must be kept dry; failure to do so may result in product reliability issues

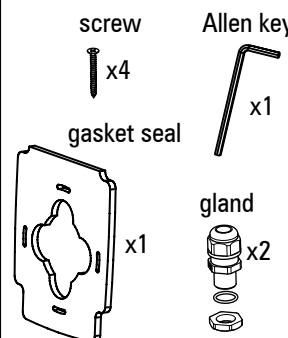
CAUTION: fixtures can become very hot. Use discretion in placement

screw x4

Allen key x1

gasket seal

gland x2





x1



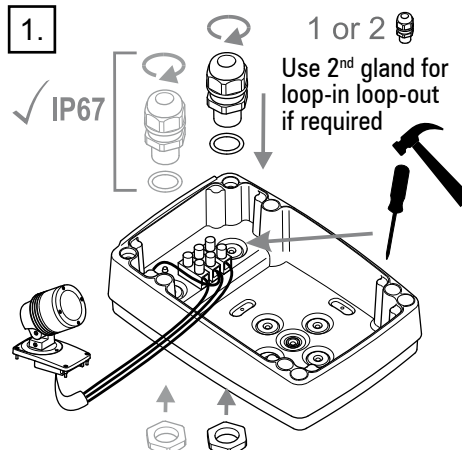

NO POWER TOOLS



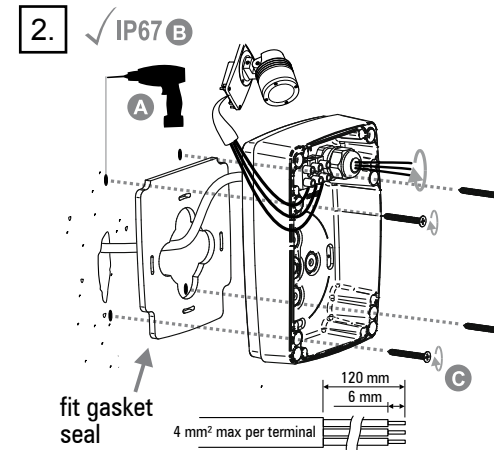
DO NOT USE SILICONE ON OUTSIDE SURFACE



DO NOT OVERTIGHTEN

1.  1 or 2  Use 2nd gland for loop-in loop-out if required

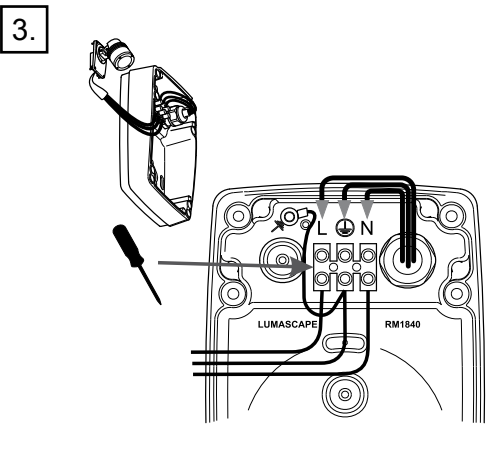
✓ IP67

2.  ✓ IP67 B

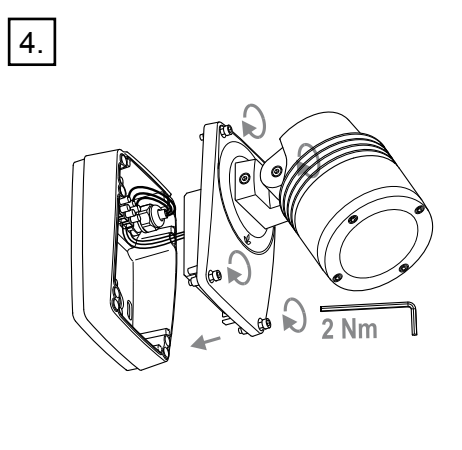
fit gasket seal

120 mm
6 mm

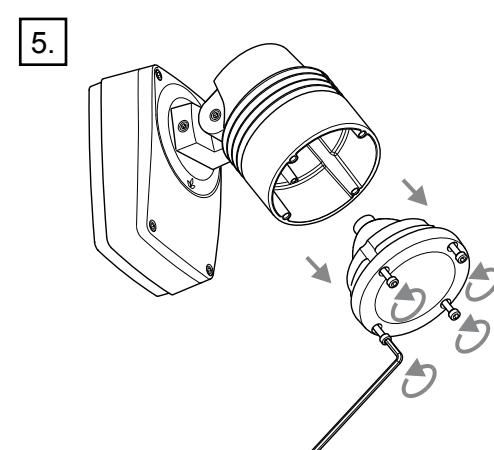
4 mm² max per terminal
cable strip length

3. 

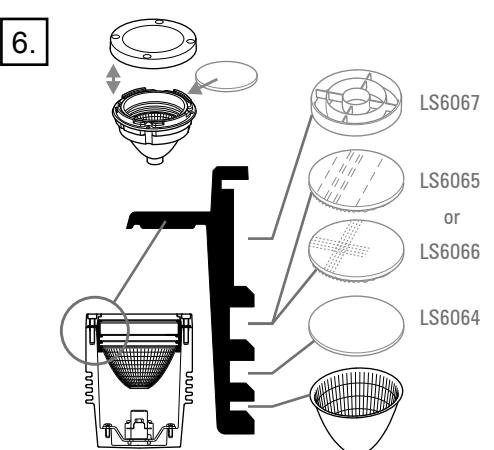
LUMASCAPE RM1840

4. 

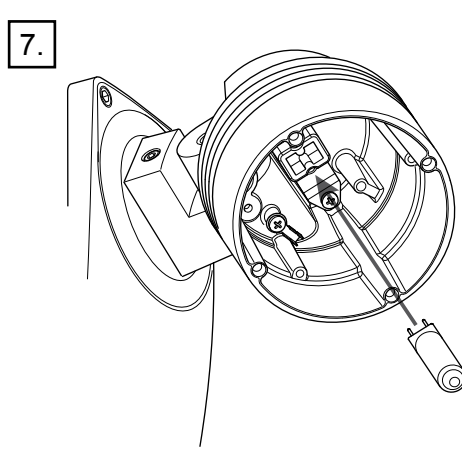
2 Nm

5. 

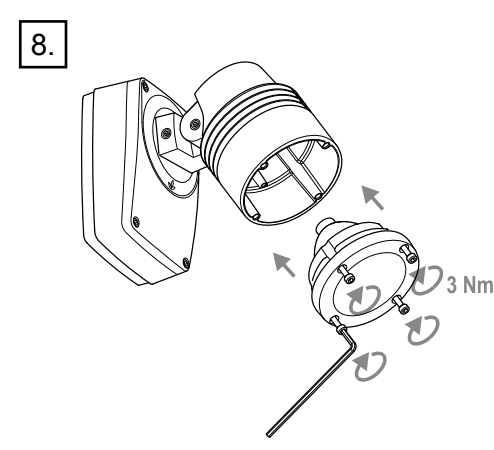
3 Nm

6. 

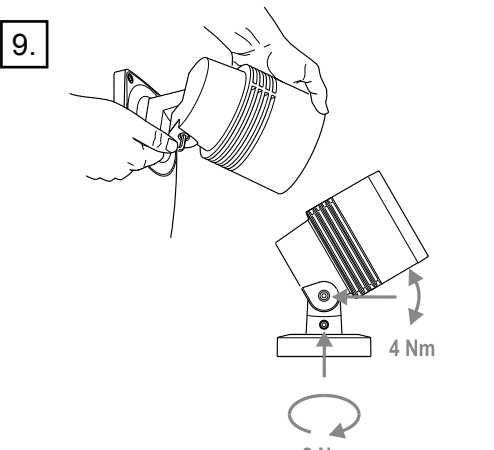
LS6067
LS6065
or
LS6066
LS6064

7. 

4 Nm

8. 

2 Nm

9. 

2 Nm

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of FIRE or INJURY:

1. Luminaires and transformers to be installed by licensed electrical contractors.
2. Luminaires to be used for intended purpose only.
3. Do not operate the luminaires with a missing or damaged parts.
4. Use only genuine Lumascope parts to replace damaged or missing components.
5. Refer to instructions for installation and operating requirements.
6. Ensure installation complies with local regulations

Voltage insulation test (megger) will permanently damage product and will void warranty.

SAVE THESE INSTRUCTIONS.

Questions?

Call +61 7 3286 2299

Email sales@lumascope.com.au

www.lumascope.com.au