


15. Seal luminaire.


Seal immediately after de-energising.

Ensure seal and sealing surface is clean. Clean glass if necessary. Tighten lid screws Using the 3 mm allen key supplied.


Ensure seal/sealing surface is free from debris. Lumascape recommends tightening in the


below torque pattern Do not overtighten screws, 3 Nm max.

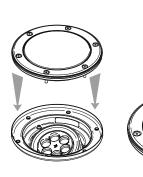

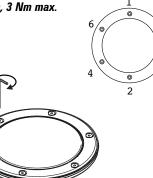

Wiring Diagrams

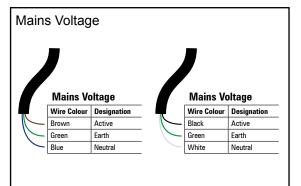

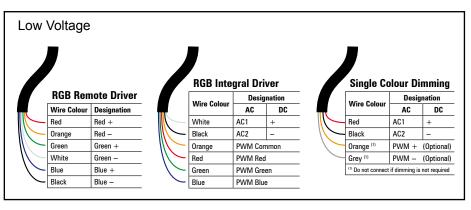

Questions? Call +61 7 3286 2299 Email sales@lumascape.com.au www.lumascape.com.au

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of FIRE or INJURY:

- 1. Luminaires and transformers to be installed by licensed electrical contractors.
- 2. Luminaires to be used for intended purpose only.
- 3. Do not operate the luminaires with a missing or damaged parts.
- 4. Use only genuine Lumascape parts to replace damaged or missing components.
- 5. Refer to instructions for installation and operating requirements.
- 6. Ensure installation complies with local regulations


Voltage insulation test (megger) will permanently damage product and will void warranty.

SAVE THESE INSTRUCTIONS.

LS644-2 Mounting Collar Installation

1.

4.

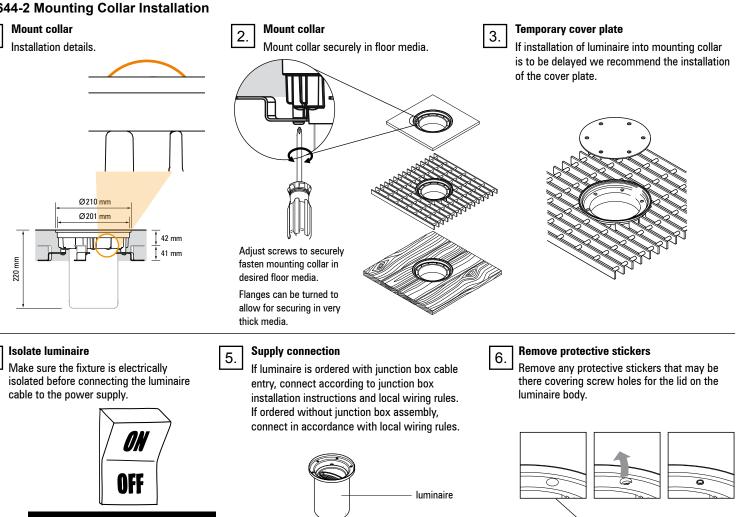


Power supply must be isolated prior to connection or disconnection of cables. Failure to do so will result in damage to the luminaire components.

When installing a luminaire with quick connector and junction box assembly use electrical grade resin (contractor to provide) to water proof electrical connection in junction box after connection has been made and tested. See pg 1 steps 3-5 for details.

7.

Mount luminaire

Insert luminaire into mounting collar aligning holes in the flange with tapped holes in the collar. Insert lamp, test and seal luminaire.

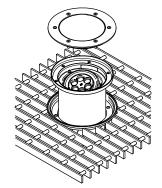

Accessories 8.

Add accessories (Note refer to accessory stacking sheet above). Further gimbal adjustments may be required with accessories in place.

Run luminaire 9.

where possible

position j-box

within void

Lay lid partially over luminaire to allow a gap for any moisture present to evaporate prior to sealing. Connect to supply and allow to burn for 10-15 minutes. Seal luminaire.

finished

surface

junction


box

supply

conduit

level

IMPORTANT - DO NOT ENERGISE WITHOUT PARTIALLY COVERING LAMP

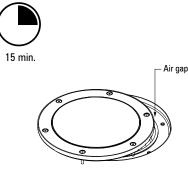

Seal luminaire.

10.

Seal immediately after de-energising.

Ensure seal and sealing surface is clean. Clean glass if necessary. Tighten lid screws Using the 3 mm allen key supplied.

Lumascape recommends tightening in the below torque pattern

Do not overtighten screws, 4 Nm max.

